



[www.minelab.com](http://www.minelab.com)

Translations of this Getting Started Guide and the full length User Manual are available to download online.

# EXCALIBUR II

## GETTING STARTED GUIDE




4901-0381-2




Minelab Electronics,  
PO Box 35, Salisbury South  
South Australia 5106




### ASSEMBLY

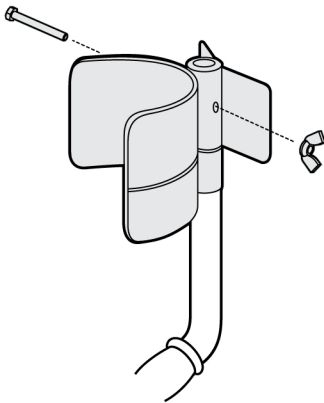


**1** Attach the Armrest to the Upper Shaft.

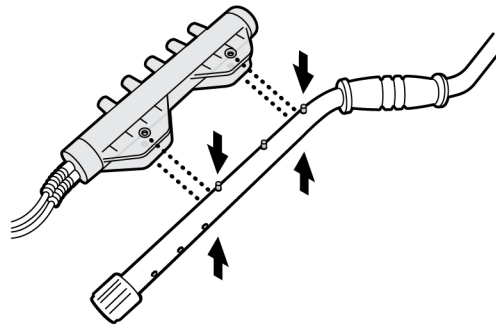


**2** Attach the Control Cylinder to the Upper shaft.

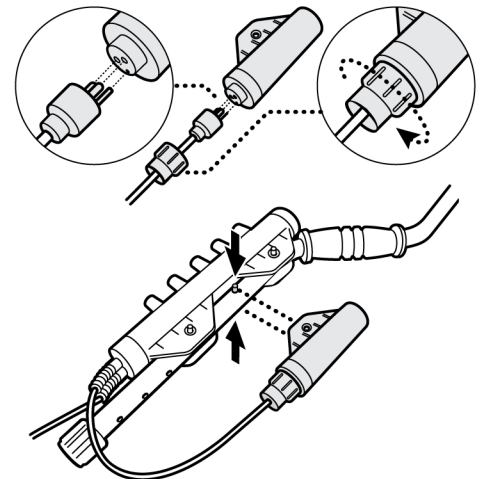


**3** Connect the Battery Pack to the Upper Shaft.

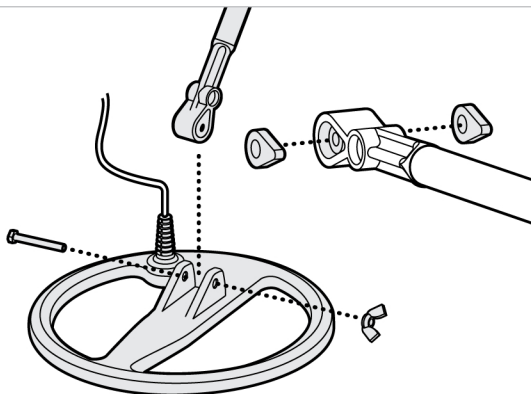

**4** Attach the Lower Shaft to the Coil.

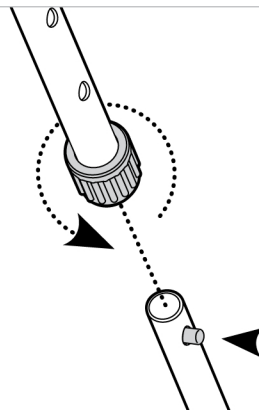

**5** Attach the Upper Shaft to the Lower Shaft.

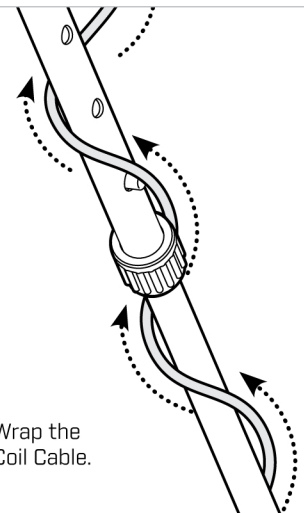

**6** Wrap the Coil Cable.

# QUICK START

## DISCRIMINATE MODE

For detecting non-ferrous metals

- 1 Set the mode switch to Disc (Discriminate).




- 2 Turn the detector On by turning the Threshold control clockwise until it clicks. Continue turning until the audio tone becomes just audible.



- 3 Set the desired position of the Discriminate control.



- 4 Set the Sensitivity control to Auto or at the maximum manual setting without electrical interference.

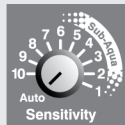

- 5 Begin detecting.

## PINPOINT / ALL METALS MODE

For detecting all types of metals

- 1 Set the mode switch to Pinpoint / All Metals.



- 2 Turn the detector On by turning the Threshold control clockwise until it clicks. Continue turning until the audio tone becomes just audible.



- 3 Set the Sensitivity control to Auto or at the maximum manual setting without electrical interference.



- 4 Begin detecting.

## CONTROLS

### EN English

1. Discriminate
2. Sub-Aqua
3. Auto
4. Sensitivity
5. Volume
6. Off
7. Threshold
8. Discriminate
9. Pinpoint / All Metals

### FR Français

1. Discrimination
2. Sous-marin
3. Auto
4. Sensibilité
5. Volume
6. Désactivé
7. Niveau Seuil
8. Discrimination
9. Centrage / Tous Métaux

### ES Español

1. Discriminación
2. Bajo el agua
3. Automático
4. Sensibilidad
5. Volumen
6. Apagado
7. Nivel del Umbral
8. Discriminación
9. Localizar / Todos los metales

### ZH 中文


1. 识别
2. 水下
3. 自动
4. 灵敏度
5. 音量
6. 关闭
7. 阈值
8. 识别
9. 精确定位 / 所有金属

### IT Italiano

1. Discriminazione
2. Subacqueo
3. Auto
4. Sensibilità
5. Volume
6. Spento
7. Livello Soglia Audio
8. Discriminazione
9. Localización / Tutti i Metalli

### RU Русский

1. дискриминатор
2. Подводный
3. Авто
4. Чувствительность
5. Громкость
6. Выкл
7. Порог. тон
8. дискриминатор
9. Центр цели / поиском всех металлов

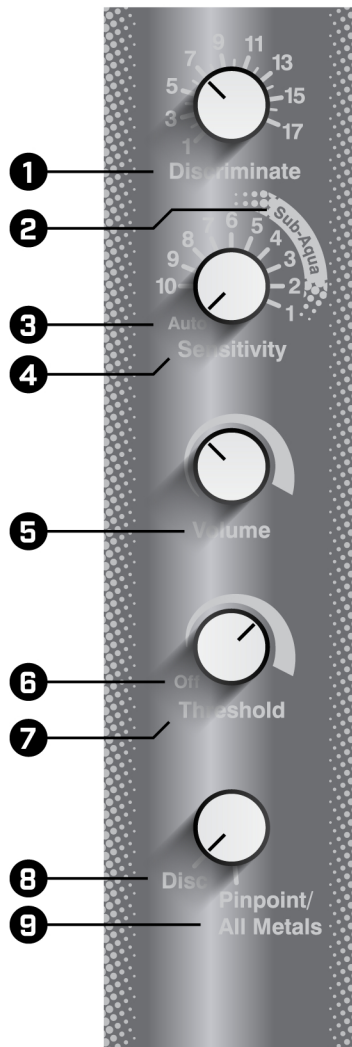

## BATTERY

### Low battery alarm

When the battery level is very low, the threshold tone will gradually increase to a loud continuous signal.

### Charging

The Excalibur II is supplied with an adaptor plug and a mains charger.

The charger will charge the batteries from local mains (AC) power outlets.

